

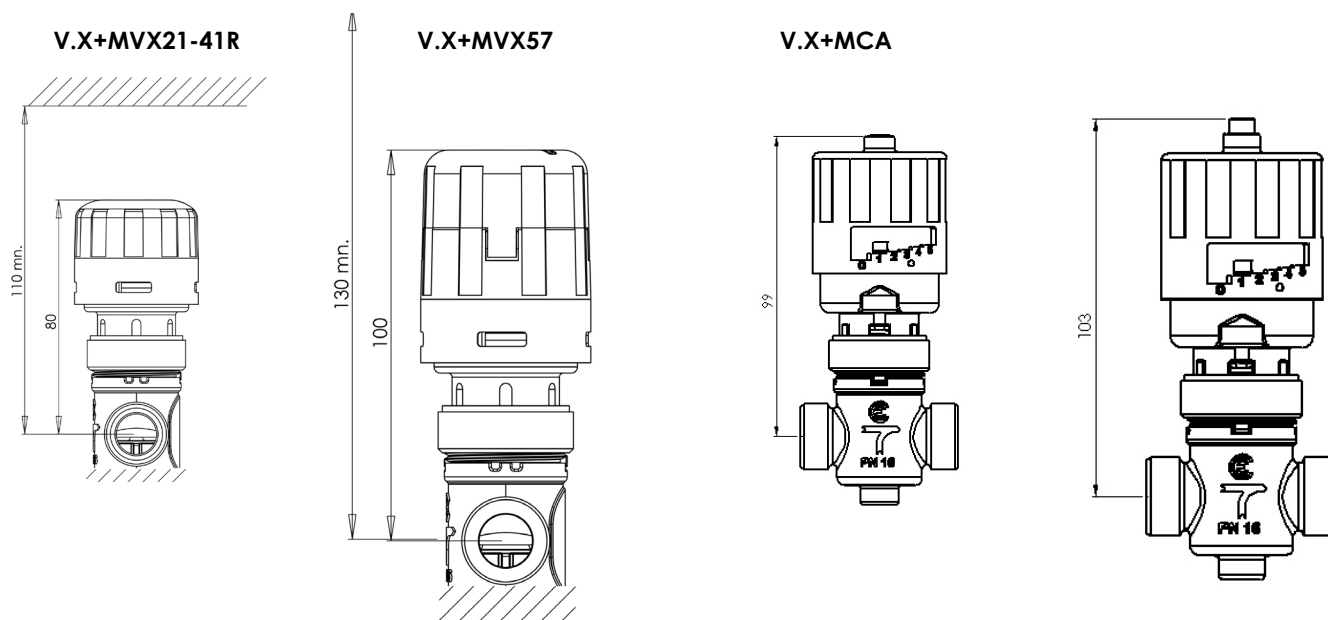
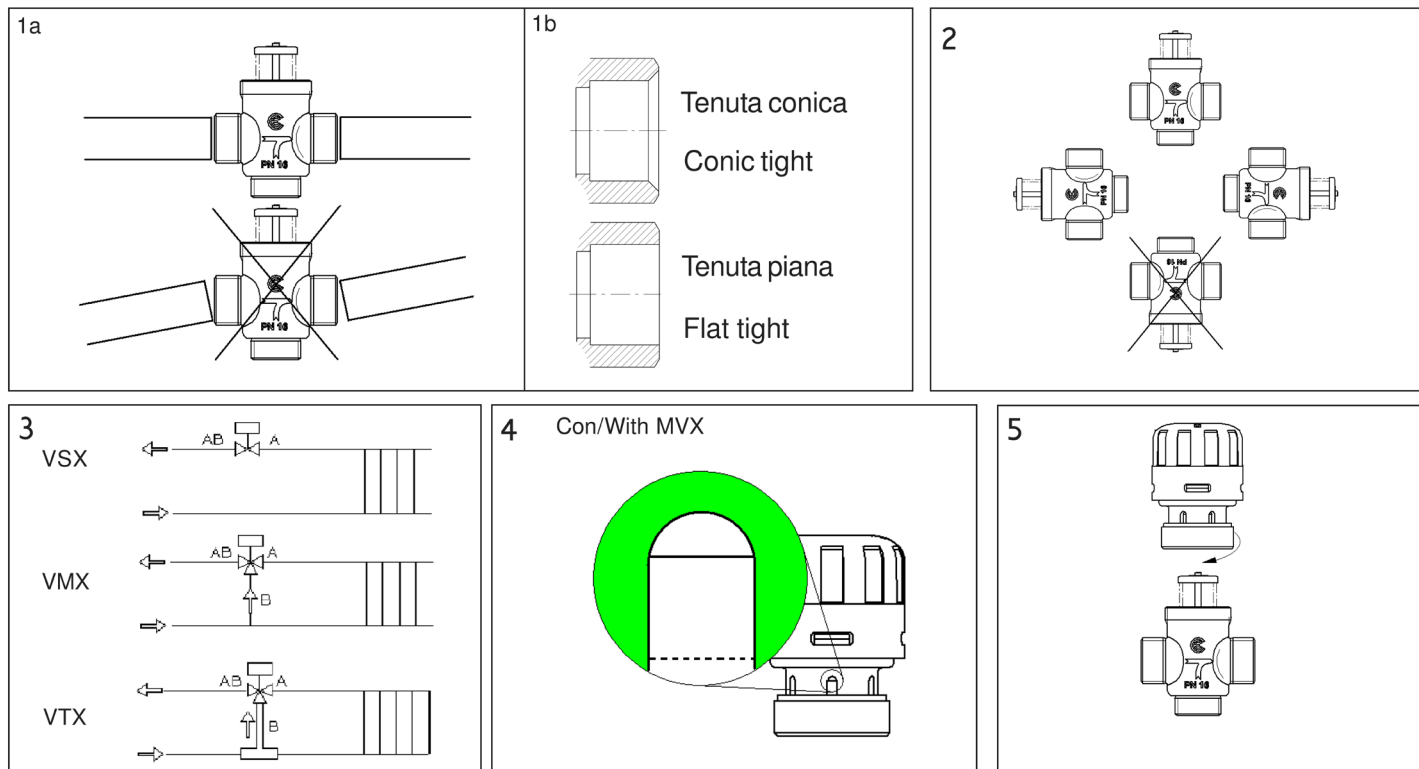
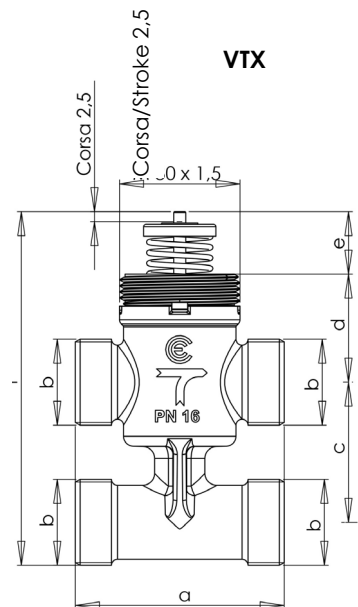


ISTRUZIONI DI MONTAGGIO / MOUNTING INSTRUCTIONS

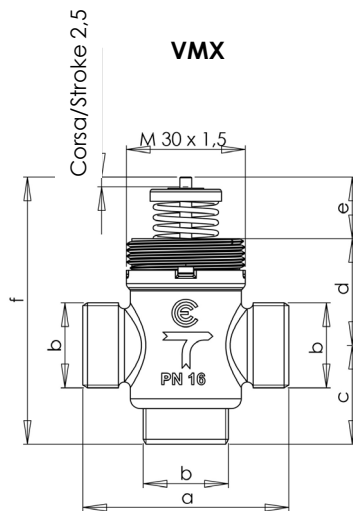

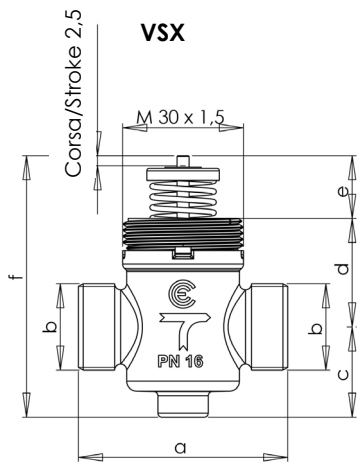

Valvola/Valve	a	b	c	d	e	f
VSX09P - VSX10P	52	G1/2"A	22,5	27	15,6	65
VSX11P - VSX12P						
VSX13P - VSX13						
VSX21 - VSX21P	56	G3/4"A	23,6	25,8		

Valvola/Valve	a	b	c	d	e	f
VMX09P - VMX10P	52	G1/2"A	25	27	15,6	65
VMX11P - VMX12P						
VMX13P - VMX13						
VMX21 - VMX21P	56	G3/4"A	34	25,8		75,4

Valvola/Valve	a	b	c	d	e	f
VTX09P - VTX10P	52	G1/2"A	35	27	15,6	88,4
VTX11P - VTX12P						
VTX13P - VTX13						
VTX09P4 - VTX10P4	56	G1/2"A	40	25,8	15,6	93,4
VTX11P4 - VTX12P4						
VTX13P4 - VTX13P4						
VTX21 - VTX21P	56	G3/4"A	50	25,8		98,4
VTX21P4	56	G3/4"A	40	25,8		88,4